

PRODUCT CODE: 615R-K119-T037-A117
& 615R-K120-T037-A118

SK119 & SK120 Safety Knife Blade Change Instructions

FR: Changement de lame de couteau de sécurité

ES: Cambio de hoja de cuchillo de seguridad

DE: Klingenwechsel des Sicherheitsmessers

This knife replacement guide is suitable for both the SK119 & SK120 Safety Knives.

These metal detectable safety knives are heavy duty and ideal for cutting packaging, including cardboard.

Scan the QR code to watch our video guide of the blade change process.

We sell replacement
knife blades!
618-P32-K005-T388
for this knife



1



FIND KEY (PICTURED) IN PACKET WITH SAFETY KNIFE.

2



PLACE KEY IN CIRCLE FOUND ON KNIFE BODY AND TURN 90 ° LEFT - THE CIRCLE SHOULD POP UP PROUD OF THE KNIFE BODY. ENSURE THE KNIFE IS SET TO 'UNLOCK'.

3



SLIDE THE TOP HALF OF THE KNIFE UNTIL BLADE IS FULLY EXPOSED.

4



CAREFULLY LIFT BLADE AWAY FROM THE KNIFE HOUSING AND REPLACE.

5



SLIDE THE TOP HALF OF THE KNIFE BODY BACK ALONG THE BOTTOM HALF, UNTIL BOTH HALVES ARE FLUSH TOGETHER.

6



USING THE KEY, TURN THE CIRCLE 90 ° RIGHT TO LOCK THE 2 HALVES OF THE KNIFE BODY TOGETHER. THE KNIFE IS NOW READY FOR REUSE.

